

Brand Code Table

Brand	Model Code	Brand	Model Code
ALPIN	0252, 0253, 0764, 0765	LIANGYU	0233, 0451, 0963
AUCMA	0288-0296, 0462, 0801, 0974	LITTLE DUCK	0015-0020, 0527
AUX	0297-0300, 0451, 0474, 0475, 0809, 0963	LOREN-SEBO	0255, 0471, 0472, 0983
BAOSHEN	0264, 0776	MACQUAY	0234-0237, 0465, 0977
BOERKA	0383, 0434, 0436, 0437, 0895	MICOM	0415, 0927
CARRIER	0203-0209, 0456-0458, 0482-0486, 0563-0565	MIDEA	0260-0265, 0526, 0772, 0776
CHANGHONG	0301-0308, 0813, 0817, 0819	mitsubishi	0001-0045, 0476-0479, 0522, 0523, 0528, 0532, 1028
CHIGAO	0379-0382, 0489, 0515, 0892	NORITZ	0431, 0943
CHOFU	0184-0187, 0699	PANASONIC	0138-0154, 0483, 0490-0492, 0651, 0995
CHUNLAN	0345-0350, 0450, 0453, 0962	PANDA	0378, 0890
CORONA	0155-0163, 0459, 0670	PHILCO	0210, 0211, 0487, 0488, 1000
CONROWA	0377, 0889	PROTON	0421-0423, 0934
CONSUL	0463, 0975	RAYBO	0362-0367, 0876
DAEWOO	0203-0209, 0406, 0717, 0918	ROWA	0369, 0438, 0439, 0494, 0527, 0531, 0681
DAIKIN	0171-0183, 0566, 0577, 0683, 0695	Sabro	0435, 0508-0508, 1018
DOCTOR	0221, 0449, 0733, 0961	SAIJO DENKI	0212-0215, 0724
DONGBAO	0355-0361, 0867, 0870	SAMPO	0424-0426, 0938
DONGXINBAO	0413, 0925	SAMSUNG	0189-0196, 0516, 0518, 0700, 0707
Electrolux	0216-0220, 0569, 0729, 0732	SANYO	0046-0095, 0558, 0529, 0530, 0606
FEDDERS	0498, 0499, 0528	SASUKI	0254, 0470, 0982
FRESTECH	0277, 0519, 0520, 0789	SHANGLING	0384-0388, 0444, 0445, 0956
FUJITSU	0127-0137, 0464, 0552-0554, 0641, 0976	SHANXING	0392, 0449, 0961
FUNAI	0430, 0481, 0942, 0993	SHARP	0096-0106, 0525, 0608, 0616
GALANZ	0371, 0372, 0521, 0883	SHENGFENG	0376, 0480, 0992
GUQIAO	0244, 0291, 0803	SHINCO	0351-0354, 0454-0456, 0866
GLEE	0398, 0399, 0900	SHUANGLU	0376, 0404-0407, 0480, 0992
GOLDSTAR	0201, 0466-0469, 0713, 0980	SHUAIKANG	0288, 0800
GREE	0309-0316, 0482, 0512, 0513	SONGGE	0428, 0429, 0941
HAIER	0266-0272, 0453-0455, 0966	SOVA	0409, 0410, 0921
HISENSE	0332-0335, 0517, 0844	SUMMER	0427, 0939
HITACHI	0118-0126, 0630, 0637	SUNDURG	0257, 0505, 1017
HUABAO	0336-0344, 0850	SWAN	0434, 0477, 0516, 0524, 0946
HUAKE	0408, 0920	TADIRAN	0246-0251, 0758, 0762
HUAMEI	0402, 0460-0465, 0972	TATUNG	0419, 0420, 0932
HUALING	0317-0325, 0452, 0831	TCL	0273-0281, 0476, 0493, 0570, 0786, 0793
HUIFENG	0370, 0882	TECO	0256, 0473-0475, 0768, 0967
HUIKANG	0368, 0441-0443, 0953	TIANDI	0415, 0927
HYUNDAI	0202, 0433, 0480, 0714	TOSHIBA	0197-0117, 0479, 0561, 0662, 0489, 0629, 1001
JDC	0373, 0440, 0952	TRANE	0227-0232, 0739, 0744
JIANGNAN	0432, 0944	UNI-AIR	0222-0224, 0450, 0735, 0962
JINDA	0414, 0926	WEILI	0393-0396, 0908
JINSONG	0389-0391, 0446-0448, 0959	Whirlpool	0164-0170, 0502, 0681, 1014
JOHSON	0245, 0492, 0757	WINIA	0481, 0550, 0993
KANGLI	0374, 0375, 0887	XILENG	0411, 0412, 0923
KELON	0282-0287, 0473, 0485-0488	XINLE	0400, 0401, 0913
KLIMATAIR	0225, 0226, 0452, 0738	YANGZI(YAIR)	0403, 0915
KOLIN	0416-0418, 0929	YINYAN	0258, 0259, 0326-0331, 0478, 0838
KONKA	0397, 0457-0459, 0809	YORK	0107, 0238-0243, 0573, 0751
LG	0197-0200, 0514, 1026		



MADE IN CHINA
NO. K-E-00078-V2



6 927259 110745

KT-1000

Dual Core 1028 IN 1

Universal A/C remote

**TIMER
OFF**

**CLOCK
DISPLAY**

**MEMORY
FUNCTION**



KT-1000
Universal A/C remote



Control 98 Percent Air-conditioners in the world


PILOT OF UNIVERSAL A/C REMOTE CONTROLLER KT-1000 Dual Core universal Air-Conditioner remote control Guide

Product Description

KT-1000 is the latest product of our company. Big volume, low power, good quality and convenient to use. You can input brand code directly, or search the model code automatically. Function of timer off, clock display and code memory, the perfect designment provides you with convenience. So it is your best choice. Please read this user's guide carefully before using it, which will be a great help to use the remote control for you.

Model setting of remote control


1. Open the battery cover, put 2 AAA(UM-4,R03) batteries as per polar indicated on battery cabin.
2. Find the code from brand code list. If there are many models for one brand, you have to try the first, if it doesn't work, please try the second till it works.
3. Press "SET" key, brand code on LCD will flash, press code "+" or "-" until required brand code appears. Then press "ENTER" key, the brand code stops flashing. Aim at air-conditioner by pressing ON/OFF key, you can control your air conditioner.

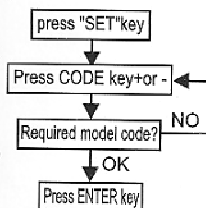

Remote Control Auto Search

If you don't know brand of your air-conditioner or you can't find required brand from brand code list, please operate as per the following step:

1. Insert batteries, let remote aim at air-conditioner, press "SET" key again and again. Press it once, brand code adds 1 automatically and emit corresponding receives signal and produces buzzer sound. Then press "ENTER" key.
2. After turning on the air conditioner, try other function keys. If they do not work, repeat above steps until it is correct.

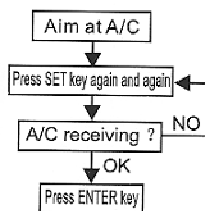

Clock setting of Remote control

1. Press "CLOCK" key, the clock on LCD will flash.
2. Press "CODE/TIME + or -", tune to correct time. Pressing once is one minute. Press and hold it, time will increase or decrease quickly.

3. Press "CLOCK" key again, the clock on LCD stops flashing, the setting is ok. (Not pressing "CLOCK", It would be also finished after five seconds)

Timer off setting of remote control

Timer off: you should set timer off, only after turning on your air conditioner.

1. Press the "TIMER OFF" key, the clock signal on LCD appears and time flashes.
2. Press "CODE/TIME + or -", tune to required time. Pressing once is ten minutes. Press and hold it, time will increase or decrease quickly.
3. Time flashes and it will stop after 5 seconds. The LCD displays current time and clock signal. Now setting finishes.

NOTE

1. the time range that you can set is 00-24 hours.
2. If press the TIMER OFF key while the time is flashing, timer is deleted.
3. After timer setting is finished, you should make the remote aim at the receiver of air conditioner in available distance. If not, the setting is null.
4. If you want to see the timer, you should press the TIMER OFF key, the LCD will display the time you setting and after 5 seconds it will display current time.

Attention

1. Generally, the battery can be used for one to two years. If it is not used for a long time, remove the battery so as to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together). It needn't set up again after changing the batteries.
2. The manufacturer keeps the right to change the parameter and function of product.

Technical Parameters

Controllable distance: Large than 8 meters

Battery model: Battery AAA(UM-4,R03)×2

Dimension: L130×W46×D16mm

Weight: Approx×50g

(excl.the batteries)